

sikkens


Autowave TIS 5.0.2

Notes


All degreasing must be carried out with two clean cloths using the wipe on wipe off method of application



Stages

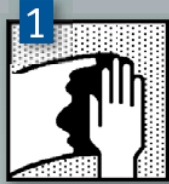

Degrease

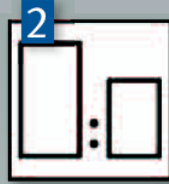

100 Autowave:
10-20 Autowave Activator




Use mixing stick no.14



Gravity 1.3-1.5mm



Apply 2 coats

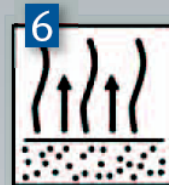

Flash off until matt between coats



Apply drop coat
(metallic/pearl colours only)



Dry until matt
(15 minutes minimum)